



TECHNICAL BULLETIN
Instructions

SCI-SPAN[®]

Temporary Crown & Bridge Material, Fluorescent

CONTENTS:

- 50 cc material in Dual Barrel Cartridge
- 15 static mixers



Cat. No. 58-01

KIT VERSIONS AVAILABLE:

- Cat. No. 58-01, Shade A3
- Cat. No. 58-02, Shade A1/B1
- Cat. No. 58-03, Shade A2
- Cat. No. 58-04, Shade C2
- Cat. No. 58-05, Shade Extra White, Kit

U.S. and Foreign Patents Pending


OUTSTANDING FEATURES OF THE MATERIAL

- Transient flexibility, resulting from two step cure, facilitates handling
- Convenient and consistent working and curing times
- Increased resistance to impacts; very good mechanical properties
- Fluorescence assures good esthetics in all lighting conditions – natural and artificial
- Excellent polishability; minimal oxygen inhibited (smear) layer

INSTRUCTIONS FOR USE

I. ASSEMBLING THE CARTRIDGE SYSTEM

1. Push up the small lever (A) in back of the Applicator. Make sure plunger slide (B) is pulled back completely into the Applicator.
2. Lift lever (C) on top of the syringe and insert cartridge. Note: Notch on bottom of the cartridge aligns with the notch on the Applicator. Push down firmly on lever (C) to lock in cartridge.
3. Before attaching static mixer, remove cartridge cap (D) by turning 90° counter-clockwise; pull and remove it.
4. Line up the notch on the static mixer (E) with the corresponding notch on the cartridge. Push it onto the cartridge and turn it clockwise 90° until it locks into position.
5. The material is dispensed through the static mixer by pressing the trigger (F) of the dispenser.

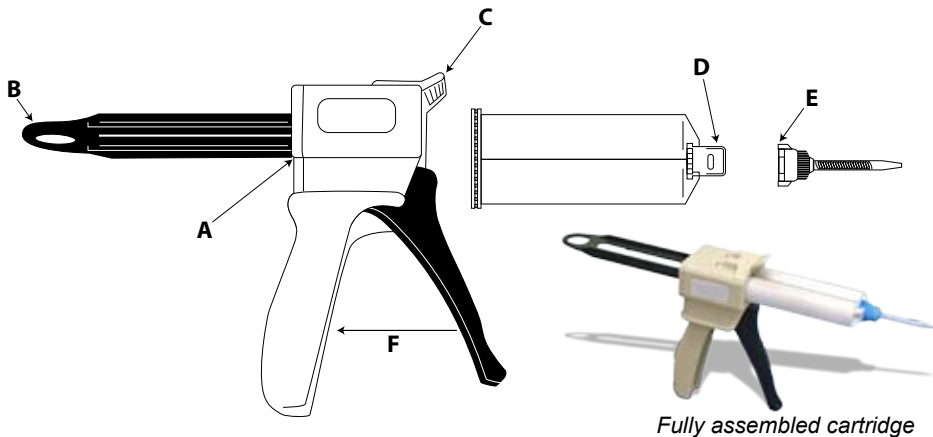

II. APPLICATION

Sci-Span is a proprietary self-cure resin based composition designed for easy fabrication of temporary crowns and bridges. It sets in two stages to allow for ease of handling. It is compatible with self and light cure resin based materials for making repairs. Sci-Span features excellent polishability, impact resistance, good esthetics in any lighting condition and is radiopaque.

1. Take a pre-operative impression, using Polysiloxane or alginate impression material. Interdental excess should be trimmed from the impression. Cut away additional impression material to alter the shape and thickness of the provisional prosthesis, if so indicated.

II. APPLICATION

2. When constructing a temporary bridge, the pontic area should be removed from the impression.

When using a cartridge for the first time, purge a small amount of material onto a mixing pad to insure that both base and catalyst pastes will be extruded equally. Discard the purged amount.

3. Prepare the abutment teeth.
4. Blow dry impression and fill with Sci-Span. Always fill from the bottom up. After the matrix is approximately $\frac{3}{4}$ full (this should be done within 40 seconds) place it in the patient's mouth.
5. Allow Sci-Span to set undisturbed for 90 seconds.
6. After approximately 100 – 120 seconds remove the matrix from mouth. At that stage, the material will be somewhat flexible and will pull over any undercuts or non-parallel preparations. The material will fully cure in 3 additional minutes.
7. Remove cured prosthesis from matrix and trim excess flash with crown and bridge scissors or diamond bur. Remove smear layer on the surface (if any) by wiping with a cloth moistened with alcohol.
8. If some mesial or distal trimming is indicated, use a fine grit diamond bur.
9. Polish, if desired, preferably using pumice or corundum filled polishing paste.
10. Cement the temporary prosthesis with a non-eugenol temporary cement.

III. REMOVAL OF CARTRIDGE

1. Push up lever (A) and pull back the plunger slide (B).
2. Lift lever (C) on top of Applicator and remove cartridge.

IV. SMALL REPAIRS OR CORRECTIONS

1. Rinse and air-dry the prosthesis.
2. Gently roughen the area to be repaired with a diamond bur.
3. Blow dry to remove surface powder, then wipe clean with alcohol. Apply on affected areas light or self-cured resin (such as Scientific Pharmaceuticals Cat. No. 54-01 or 50-01) and cure as recommended. Trim, grind and polish as needed.

Cat. No. 58-01/58-02/58-03/58-04/58-05

TIME TABLE

Dispense material into matrix & seat in mouth	Allow to set in mouth	Remove from mouth	Trimming & finishing
40-50 seconds*	90-100 seconds	2 minutes	3-4 minutes
*Depending on ambient temperature			

ADDITIONAL USES

For retaining gingival cord in place before taking impressions.

STORAGE AND SHELF-LIFE

Store at temperatures not exceeding 73°F (23°C). When stored under such conditions, the material has a shelf-life of two years. Refrigerate when not in use (for example, overnight and on weekends). When cold, the material has a stiffer consistency. For easier handling, remove from refrigerator at least 15 minutes prior to use.

© Copyright 2004 Scientific Pharmaceuticals, Inc.
Printed in U.S.A.

*For technical information,
call or write:*



SCI-PHARM



CE
0510

EU Authorized Representative:
QUALITY FIRST INTERNATIONAL LIMITED
20 Eversley Road, Bexhill-on-Sea, East Sussex TN40 1HE, UK
Voice: + 44 20 8 522 1937 • Fax: + 44 20 8 522 1937
E-mail: Hard6162@aol.com

SCIENTIFIC PHARMACEUTICALS, INC.
3221 PRODUCER WAY • POMONA, CALIFORNIA USA 91768
PHONE: (800) 634-3047 • (909) 595-9922
FAX: (909) 595-0331 • E-MAIL: scipharm@msn.com
WEBSITE: www.scipharm.com

6889 - P4/4

050207